

FLEET AND TELEMATICS

DIAGNOSTICS

1. Navigate to the **Fleet and Telematics** section.
2. Click on a piece of equipment from the map or from the list on the right of the page.
3. On the Equipment Summary page, you will see **Diagnostics**.
4. Click the **See All** button, and a detailed view of the equipment's available Diagnostics metrics will display.
5. Examples of diagnostic data points include:
 - a. Fuel Level
 - b. DEF Level
 - c. Battery Voltage
 - d. Engine Load
 - e. Oil Temperature
 - f. Oil Pressure
 - g. Coolant Temperature
 - h. Fuel Consumption